

RIFFEL
GIPFEL DES ERFOLGS


www.riffelappliances.de

Instruction Manual

Vacuum Cleaner

RIFFEL

FORCE EXTREME

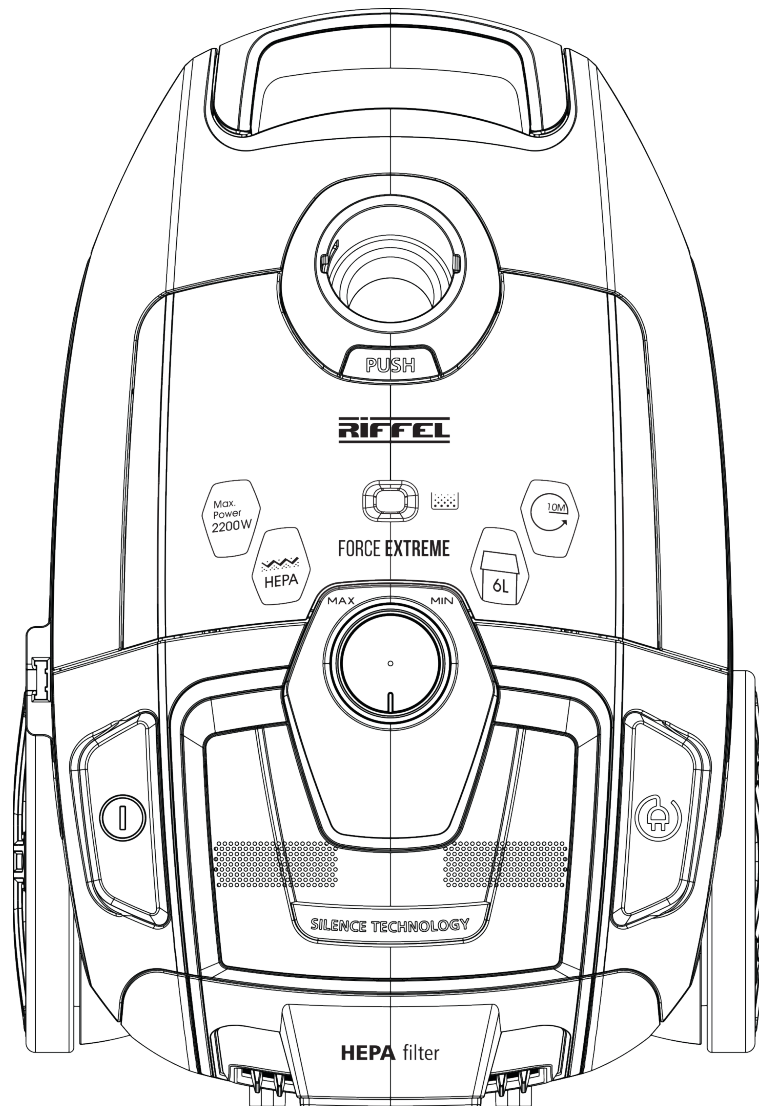

Model: VCB46A15F

Safety directions:

1. For the first operation, it is advisable to read the manual carefully before hand and keep it properly for future use.
2. Before the first operation, make sure the dust cup or the dust bag is properly installed.
3. Make sure the power supply is 220-240V~ 50/60Hz
4. Do not vacuum water and inflammable material.
5. Do not vacuum burning material and ashes.
6. Do not use the machine without a motor protection filter filled.
7. Please change the dust bag immediately when it is full.
8. Do not store or use the machine close to high temperature places.
9. Do not let children use the machine in case of danger.
10. If abnormal noise, smell, smoke or any other failure or breakage is found during the operation, you should turn off the switch and unplug it. Then contact with your service center for repair. Do not repair by yourself.

- 11.** If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 12.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 13.** Children should be supervised to ensure that they do not play with the appliance.

Warning

The plug must be removed from the power socket before any maintenance or replacement.

If the power cord is damaged, replace them only by the factory or maintenance center or similarly qualified persons.


Failure clearance

Less vacuum power of the cleaner

1. The cleaner can be used as tip the rubbish out of the full dust cup or the dust bag.
2. If blockage is found in ground brush, hose or tubes, the machine can be re-operated only after the blockage is cleared away.

Introduction of Product

VCB46A15F vacuum cleaner of clear lines and structure can produce centralized wind with less noise, adjust the operation speed, indicate full dust, and automatically rewind the wire, multi-level filter exchange, dust cup and dust bag two in one. Being convenient and flexible in cleaning dust, it is reliable and ideal household cleaning tool.

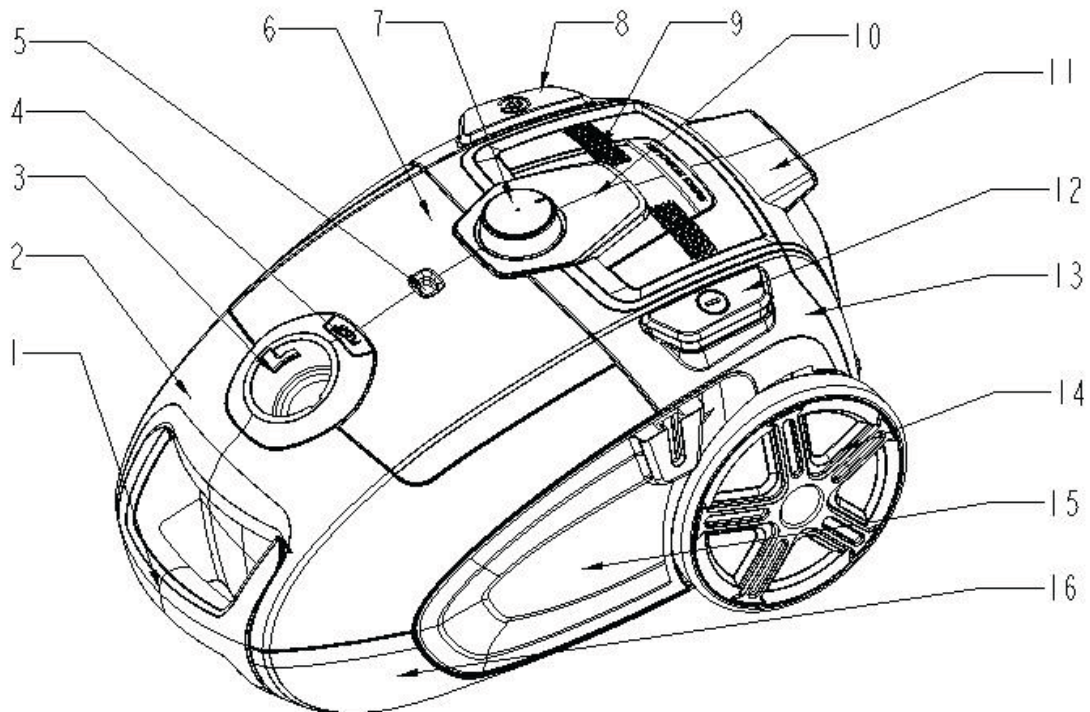


- | | | |
|-----------------------|-------------------------|-------------------------|
| 1. Handle front cover | 2. Front cover | 3. Suck base |
| 4. Accessories Clamp | 5. Dust full indicator | 6. Accessories Cover |
| 7. Speed control knob | 8. Cord rewinding pedal | 9. Steel Filter |
| 10. Ornament cover | 11. Air Out Holder | 12. Switch pedal |
| 13. Back cover | 14. Big wheel | 15. Left ornament plate |
| 16. Base body | | |

Attached list

A set of hose accessories, one extendible tube, one floor brush, one integrated brush & nozzle

Operation methods


1. Connects the hose accessories: insert the hose end into the hose socket at the front cover and then hook it. (Fig1)
Remove the hose accessories: press the adaptors at both side of the hose end and then pull the hose accessories. (Fig2)
2. Connect the metal expansion tube to the curves end of the hose. (Fig3)
3. Connect different nozzle tools to the tube for different cleaning purpose: floor brush (adjusted to the type of ground) for carpet or floor (Fig4,5); combined brush & nozzle for sofa, wall surface, curtain, corner or space between furniture and etc. (Fig6)
4. Turn on the machine: insert the plug of cord into the power socket which conform to that on the label for power supply, and press the switch pedal, the machine could start working (Fig7).
5. Cord rewinding: hold the plug and pull out the cord; press the cord rewinding pedal, that power cord will be drawn in.(Fig8)
6. The floor brush or nozzle can insert the brush hanger in the back of back cover when it is out of use. (Fig9)

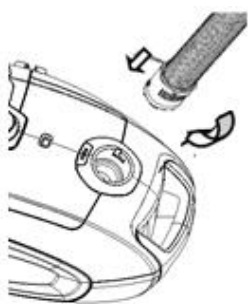


1




2

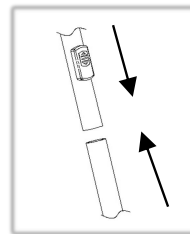


3

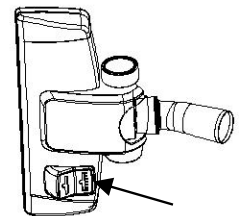


4

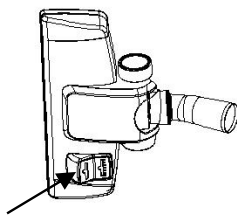


5

 


6

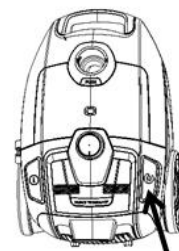

7

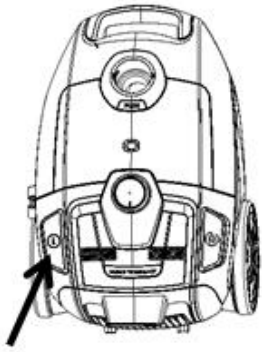


8

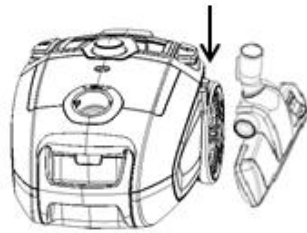


9

Maintenance


1. Change the dust bag: when the Dust full indicator turns to be red, it is time to clear the dust or replace with a new bag. (Fig1)
Open the front cover by clipping. (Fig2,3)
Take out the bag holder then remove the full dust bag. (Fig4,5)
2. The motor protection filter should be removed and rinsed once a year, and can use it after dry. If the filter is damage, a new filter should be replaced. (Fig6,7)
3. Wash or exchange the outlet filter (HEPA): clip down and remove the outlet cover by hands for wash or exchange of filter. (fig8,9)

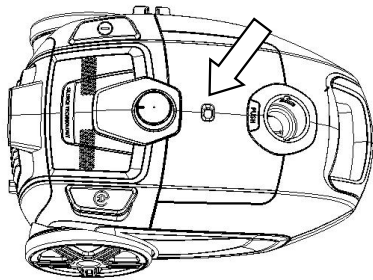



1

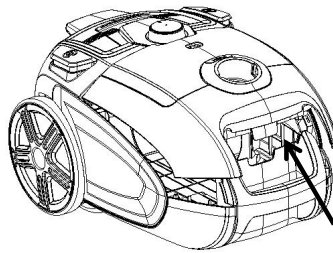


2

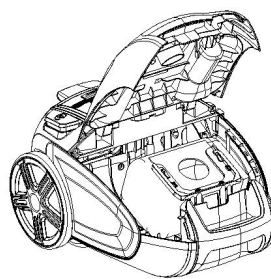


4

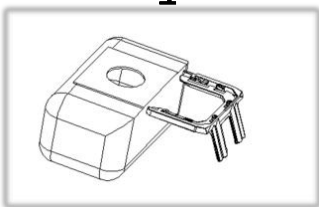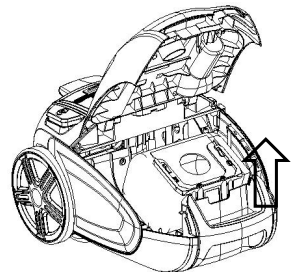


5

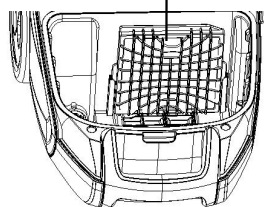


6

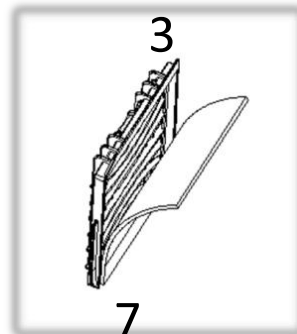

7

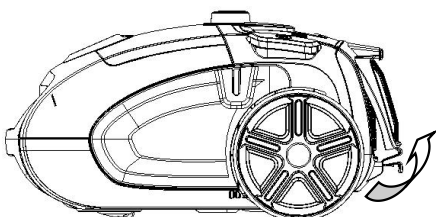

8

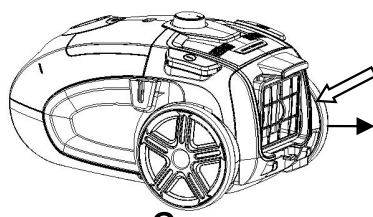

9

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

RIFFEL
GIPFEL DES ERFOLGS