

RIFFEL



STEAM IRON

MODEL : KBCL-801

Designed in Germany, Made in P.R.C.

INSTRUCTION MANUAL

PLEASE READ AND SAVE THESE INSTRUCTION


WWW.RIFFELAPPLIANCES.DE

Important safeguards


When using your iron, basic safety precautions should always be followed, including the following:

Read all instructions before using

1. Use the iron only for its intended use.
 2. To protect against the risk of electric shock, do not immerse the iron in water or other liquids.
 3. The iron should always be turned to "min" before plugging or unplugging from the mains outlet. Never pull the cord to disconnect from the mains: instead, grasp plug and pull to disconnect.
 4. Do not allow the cord to touch hot surfaces. Allow the iron to cool completely before putting away.
 5. Always disconnect the iron from the electrical outlet when filling with water or emptying and when not in use
 6. Do not operate the iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified service agent for examination and repair. Incorrect re-assembly, can cause a risk of electric shock when the iron is used.
 7. Close supervision is necessary for any appliance being used by or near children. Do not leave the iron unattended when connected to the mains or on an ironing board.
 8. Burns can occur from torching hot metal parts, hot water or steam, use caution when you turn a steam iron upside down-there may be hot water in the reservoir.
 9. If the iron is not operating normally, disconnect from the power supply. And contact the nearest authorized service agent.
 10. Your iron is designed to rest on the heel. Do not leave the iron unattended when switched on. Do not place the iron on an unprotected surface even if it is on its heel rest.
- Know your steam/spray/dry iron

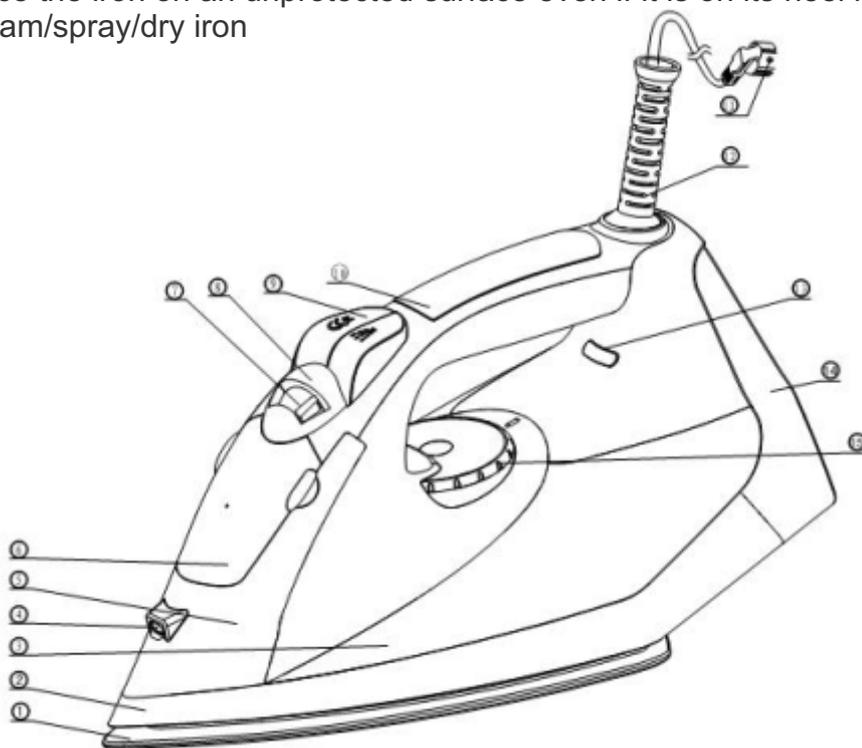

- | | |
|----------------|----------------------|
| ① Soleplate | ⑨ Spray&Brush Button |
| ② Skirt | ⑩ Handcover |
| ③ Watertank | ⑪ Power cord |
| ④ Spray Nozzle | ⑫ Cord guard |
| ⑤ Housing | ⑬ Pilot Light |
| ⑥ Water Filler | ⑭ Real cover |
| ⑦ Steam Knob | ⑮ Temperature knob |
| ⑧ Steam Cover | |

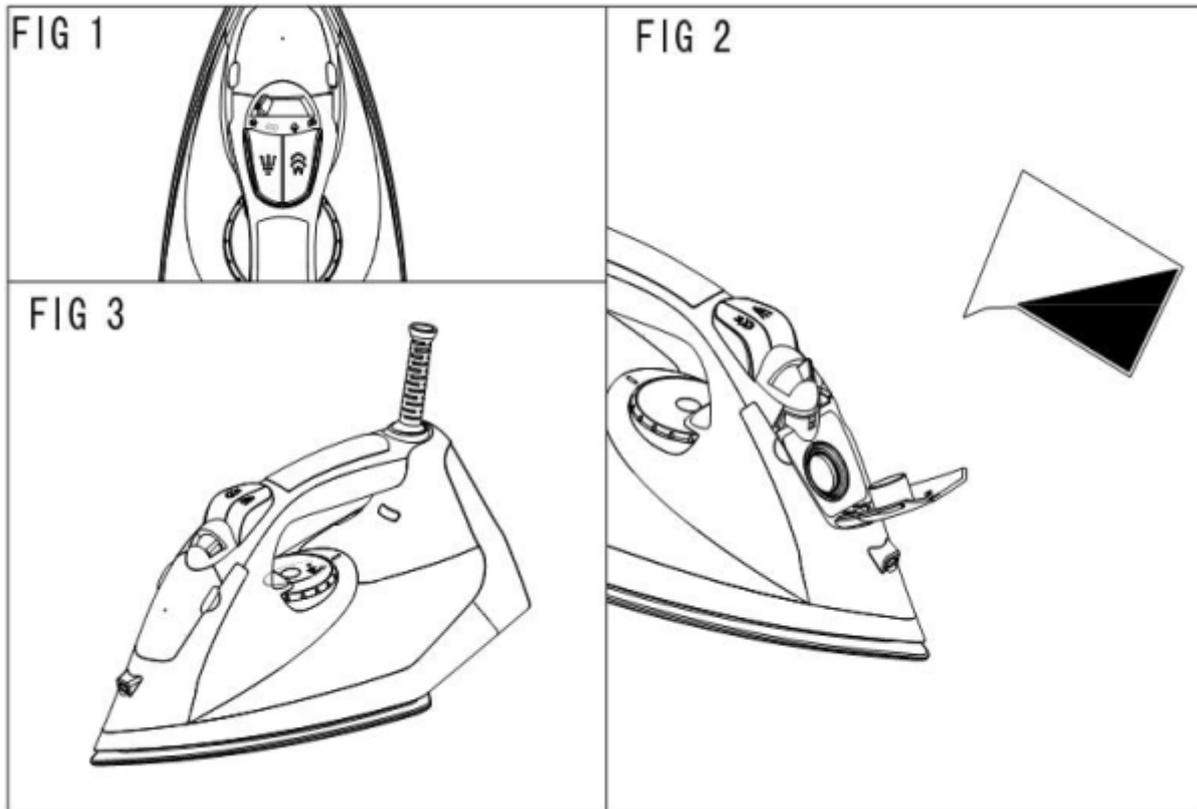

Safety recommendations and precautions

Important precautions

To make good use of your appliance , please read these instructions carefully and look at the illustrations before using it.

1. Check that the voltage on the product rating plate coincides with your mains voltage.
2. The iron shall not be used if there are visible signs of damage or if the iron is leaking .The iron shall be sent to the manufacturer or his qualified service agent before further use.
3. Completely unwind the mains cable.
4. Always unplug the iron when not in use ,even if only for a short period of time.
Unplug it from the mains and leave it standing on its rear base.
5. make sure that children can not touch the hot iron and that they can not pull on the mains wire.
6. Always unplug the iron before filling the water or when removing the excess water from it.
7. Never submerge the iron in water.
8. The iron shall be used on a stable ironing board.
9. The iron must be used and rested on a stable surface.
10. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

Special instructions

1. Model:PV-2400

Mains Supply:220V-240V~50Hz

Rated Power:2400W

2. To avoid overloads , do not plug any other high-power appliance into the same electricity line.

Suggestions before using the iron for the first time

1. Certain parts of the iron have been lightly greased therefore the iron could give off a little smoke when plugged in for the first time. This will cease after a short while.
2. Before using the iron for the first time , remove the plastic protector from the base(if it has one) clean the base with a soft cloth.
3. Keep the base very smooth. Do not run it over metal objects (such as against the ironing board, buttons , zips ,etc.)
4. Pure wool fibres (100% wool)can be ironed with the appliance in the steam position .by preference ,select a high steam position and use a dry ironing cloth.

Selecting the temperature

1. Check the ironing instructions on the garment to be ironed.
2. If the garment does not have any ironing instructions but you know the kind of fabric in question, use the chart below.
3. Fabrics that have some kind of finish (polishing, wrinkles, contrasts....) can be ironed at the lowest temperatures.
4. If the fabric contains several kinds of fibres, always select the temperature applicable, if an article contains 60% polyester and 40% cotton, you must always choose the temperature corresponding to polyester and without steam.
5. First classify the articles to be ironed according to the most suitable ironing temperature: wool with wool, cotton with cotton, etc. as the iron heats up as fast as it cools, start by ironing the articles requiring the lowest temperature such as those made of synthetic fibres. Progress towards those that require the highest temperatures.
6. Turn the temperature control until it is in front of the appropriate signal according to the following:
 - position for synthetic
 - position for wool, silk
 - position for cotton or linen

How to fill the water tank.

1. Unplug the iron.
 2. Set the steam button to dry ironing. (fig.1)
 3. Fill the tank through the filling hole. (fig.2)
- If you have hard water, it is advisable to use only distilled or demineralized water.
- do not use chemically de-limed water or perfumed**
4. Do not store the iron with water in the tank.

Steam ironing

1. Fill the iron as described in the section "how to fill the water tank".
2. Plug the iron into the mains.
3. Steam ironing is only possible when the highest temperatures shown on the temperature control are selected.
Otherwise, water may escape through the soleplate.
4. Wait until the pilot light goes out, which indicates that the selected temperature has been reached.
5. Turn the steam button to the required position.
6. When the ironing is finished and during breaks in ironing, place the iron in its upright position.
7. Disconnect the iron from the mains supply. Pour off any remaining water and leave the iron to cool off.

Spray

1. The spray can be used in any position, either in dry or steam ironing, as long as the water tank is filled with water.
 2. Press the spray button for this function
- NOTE : This button has to be pressed repetitively to start this function for the first time.

Shot of steam

Shot of steam give extra steam for removing persistent wrinkles.

- 1.Place the temperature selector at the “max”(fig.3)position and wait until the pilot light goes out
- 2.Wait for a few seconds for the steam to penetrate the fibre before pressing again.

NOTE : For the best steam quality, do not use more than three successive bursts each time. Several pumping actions are needed to start this function.

Excessive use of this feature will cause the iron to cool , ensure that the pilot light is out, before operating the shot of steam control

Defects and repairs

Do not attempt to replace a defective mains lead .The appliance has to be returned to an authorized service centre for repair.

Faults-reasons and solutions

Iron emits an odor or smoke

Iron gives off an odor when turned on for the first time. Oils used during manufacture need to be burnt off allow ten minutes for odor to disappear.

Iron does not heat

The iron should be plugged into a 230 Volt , AC electrical outlet only. The temperature dial must be set at the desired temperature.

Burst of steam feature does not work

The water tank must be at least 1/4 full .Temperature must be set to steam position. Iron should be in the horizontal position. Prime pump briefly. Allow a short pause between shots. Be sure to fully depress the burst of steam button.

Spray mist feature does not work

The water tank must be at least 1/4 full. Fill the iron as described in the section “how to fill the water tank”.

The iron does not produce any steam

There is not enough water in the water tank.Fill the water tank.

The steam control is set to position.Move the steam control to a position somewhere between the black zone.

The iron is not hot enough and/or the drip-stop function has been activated.Set an ironing temperature that is suitable for steam ironing(·to MAX).Put the iron on its heel and wait until the temperature light has gone out before you start ironing.

Flakes and impurities come out of the soleplate during ironing

Hard water forms flakes inside the soleplate.Use the anti-calc function one or more times.

This product has a legal guarantee of 2 years from the moment of its purchase and delivery to the consumer, in accordance with the terms and conditions laid out in the Royal Decree Law 1/2007 of the Spanish legislation for the acquisition of assets of durable nature.